

Sparc-Configure RSC

Ho to configure RSC / ILOM interface pf Sun Sparc machines

```
root@sol4 /usr/platform/SUNW,Sun-Fire-V210/sbin# ./scadm show
if_network="true"
if_modem="false"
if_emailalerts="false"
sys_autorestart="xir"
sys_bootrestart="none"
sys_bootfailrecovery="none"
sys_maxbootfail="3"
sys_xirtimeout="0"
sys_bovertimeout="900"
sys_wdtimeout="60"
netsc_tpelinktest="true"
netsc_dhcp="false"
netsc_ipaddr="192.168.10.61"
netsc_ipnetmask="255.255.255.0"
netsc_ipgateway="0.0.0.0"
mgt_mailhost=""
mgt_mailalert=""
sc_customerinfo=""
sc_escapechars="#."
sc_powerondelay="false"
sc_powerstatememory="true"
sc_clipasswdecho="true"
sc_cliprompt="sc"
sc_clitimeout="0"
sc_clieventlevel="2"
sc_backupuserdata="true"
sys_eventlevel="2"
```

```
root@sol4 /usr/platform/SUNW,Sun-Fire-V210/sbin# ./scadm userpassword admin
```

Passwort:
Geben Sie das Passwort erneut ein:

```
root@sol4 /usr/platform/SUNW,Sun-Fire-V210/sbin# ./scadm resetrsc
```